Assembly Instructions

Ultimate Folding Screen Dress Kit by Draper

① Attach Valance Bar to frame (see Fig. 1).

Figure 1

② Valance and Drapes snap onto Mounting Bars as shown below. Please Note: The valance will likely show some fullness (see Fig. 2).

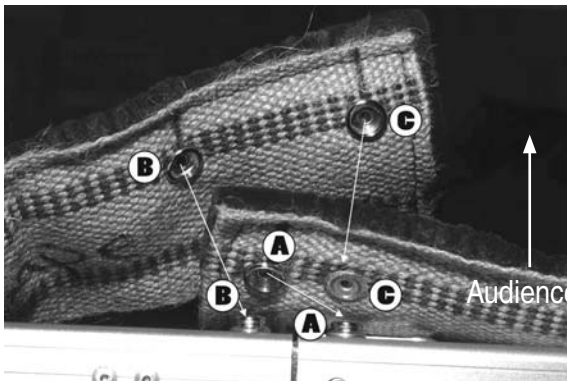

Figure 2

③ Drapery Bars mount to Valance Bar and lock using a ball detent (see Fig. 3).

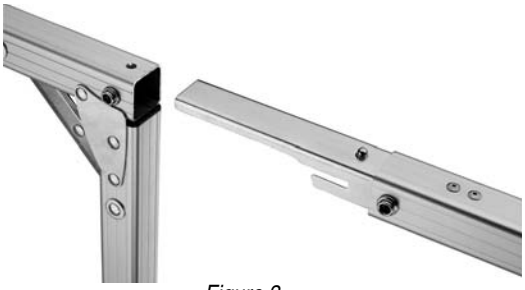

Figure 3

Caution: Beware of pinch points.

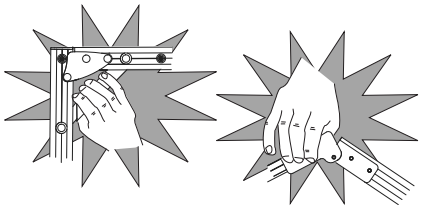

④ For adjustable skirt bar, see box below. For standard skirt attachment: The skirt attaches to snaps located along the bottom black border of the viewing surface. (see Fig. 4)

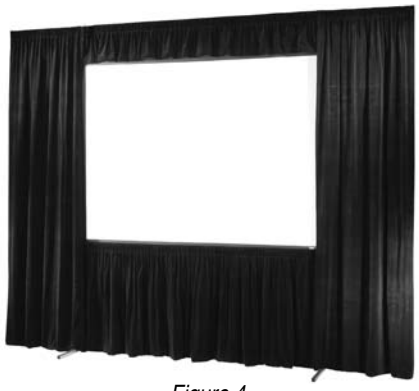

Figure 4

Adjustable Skirt Bar
for multiple formats

For the ability to change from one viewing format to another (for instance, form NTSC 4:3 to HDTV 16:9), use Draper's Adjustable Skirt Bar.

Attach one end of skirt bar to either leg by placing the outer plate on the outside of the leg/frame, and placing the handy crank and washer on the inside. Run the handy crank through the gap between the leg and frame (gap between leg and frame), then attach the other end to the other leg. The skirt then attaches to snaps located along the skirt bar.

If adjustable skirt bar is provided with a Middle Support, place in center of bottom frame and use adjustment knob to set to the proper height (see pictures below).

Please Note: Middle Support height should be set so the bottom of the screen frame is supported, but is not pushed upward so that it bows up in the center.

DRAPER®

411 S. Pearl St., Spiceland, IN 47385 USA ▮ 765-987-7999
www.draperinc.com ▮ fax 765-987-7142

Copyright © 2011 Draper Inc. Form UFS-DressKit_Inst11 Printed in U.S.A.

If you encounter any difficulty installing or servicing your Ultimate Folding Screen Dress Kit by Draper, *call your dealer or Draper, Inc., Spiceland, Indiana, (765) 987-7999 or fax (765) 987-7142.*